


Assembly instruction


Bohem 3so, 3.5so

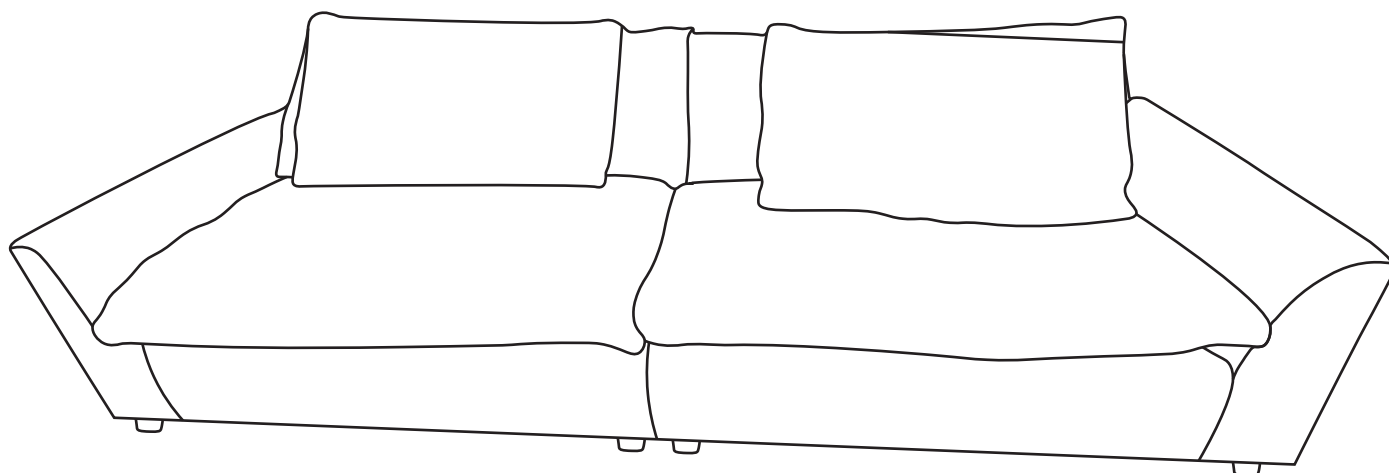



You will need



30 minutes

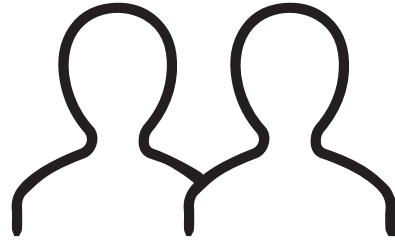


2 people

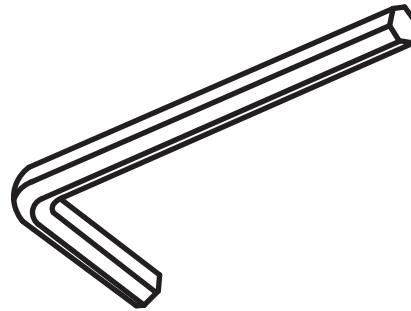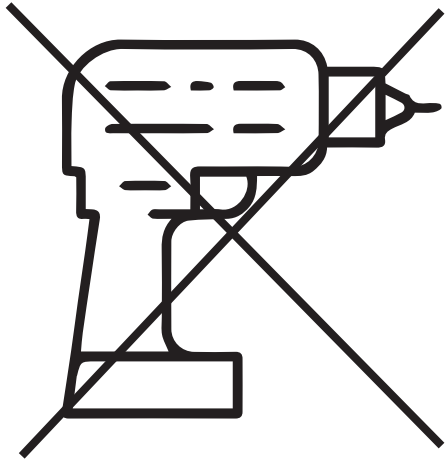


Key 2.5

Components

A

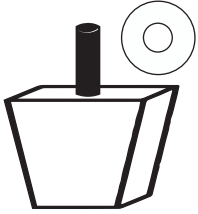


B

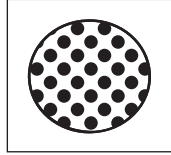


Nr	QTY	mm
A	8	H:50/80
B	8	
C	1	
D	1	
E	7	M4x20

C

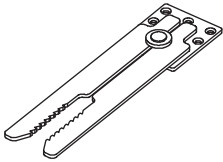

D

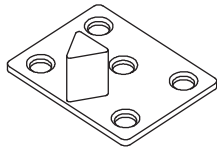



E



Mounting


Follow steps

1.

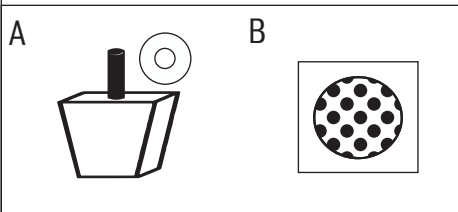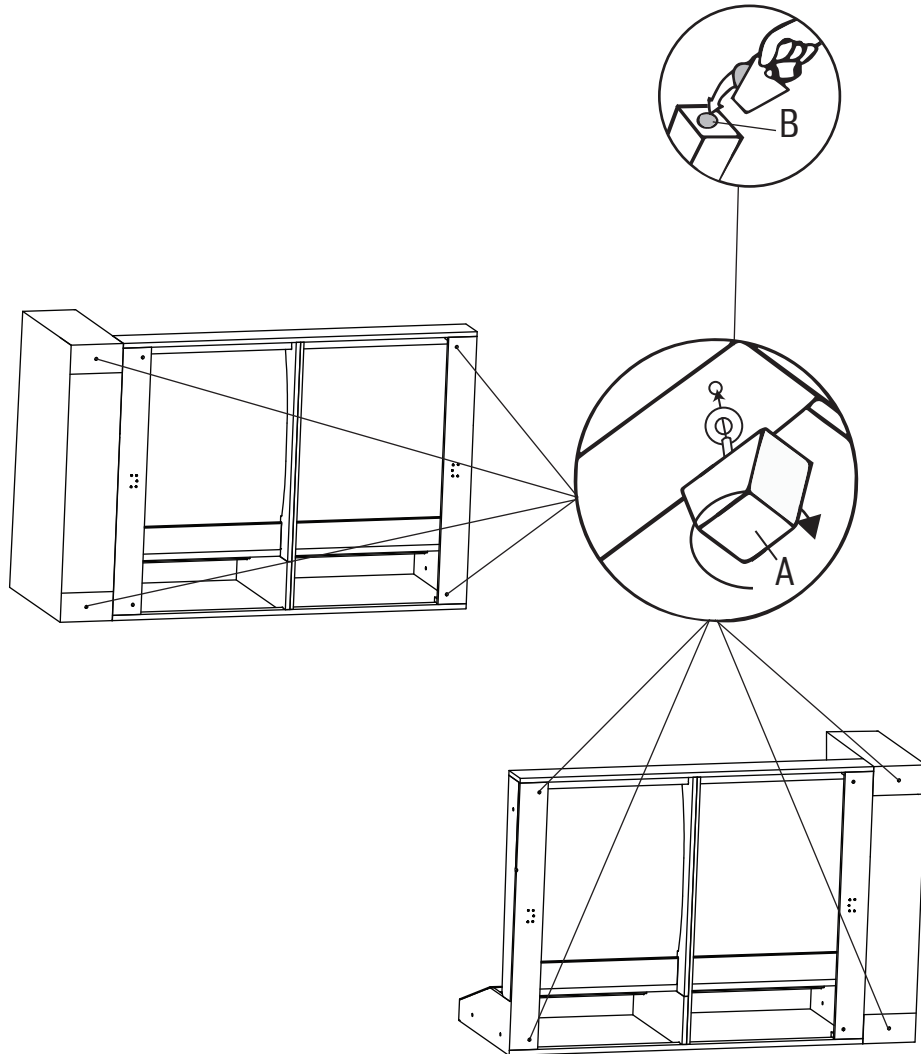

Mounting

Follow steps

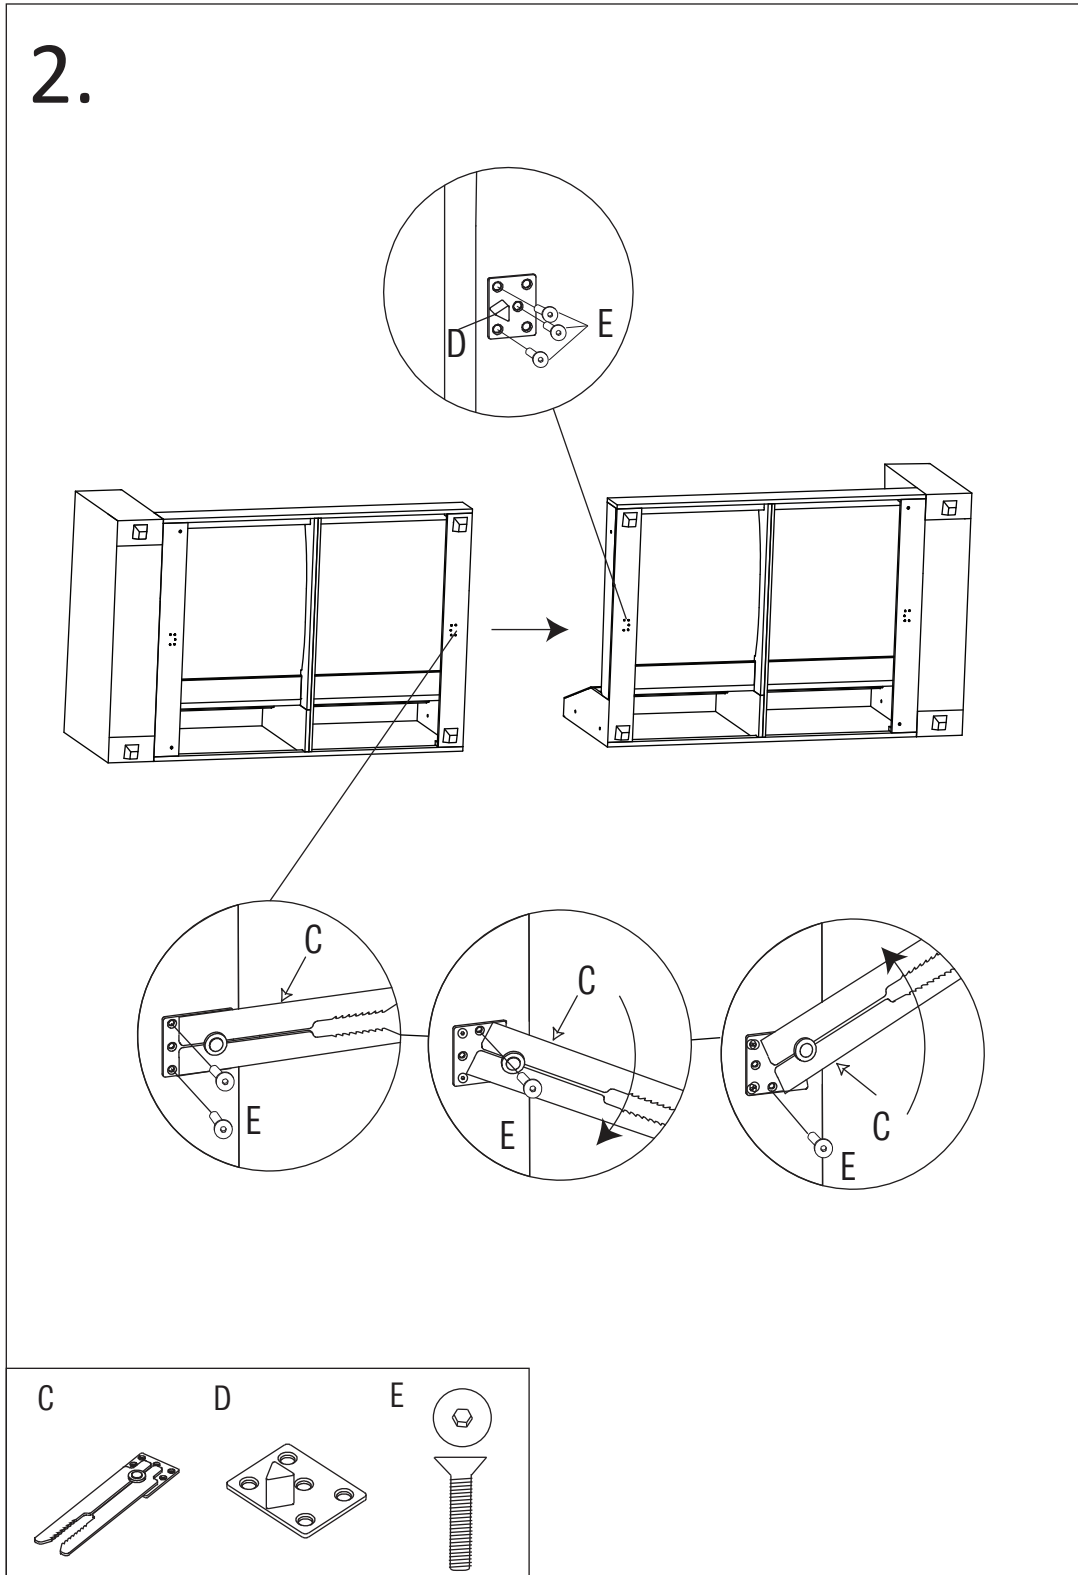

Mounting

Follow steps

3.

